

Plinth | 2000

LIFT OFF COT SIDE FITTING INSTRUCTIONS




**PLACE COTSIDE
BRACKET OVER RAIL
AS SHOWN**

**LINE THE CHAINED
PIN UP WITH THE
HOLES BACK AND
FRONT**



**PUSH PIN HOME
SECURELY**

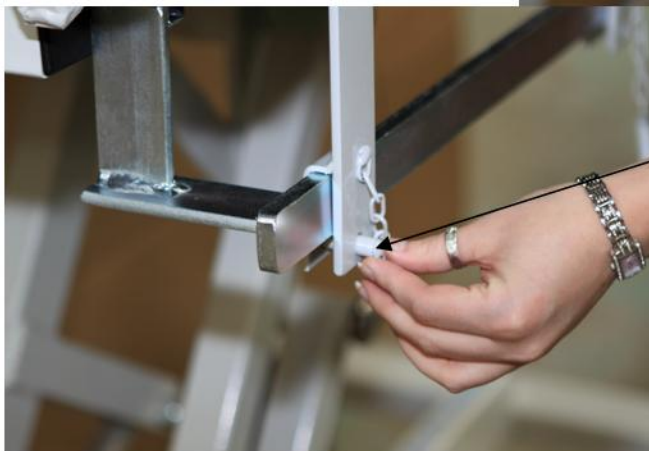

FINISHED ITEM

